

Service Manual (Manual Penyelenggaraan)

Vacuum Packaging Machine



BJY-VCM400-TT



BJY-VCM400-FS

Thank you for purchasing BERJAYA product. Please read this service manual carefully before operating the product. Please keep this manual in a safe place for future reference. (Terima kasih kerana membeli produk BERJAYA. Sila baca manual penyelenggaraan dengan teliti sebelum menggunakan produk ini. Simpankan panduan operasi ini dengan selamat untuk rujukan masa depan.)

Contents (Kandungan) :-

- Major Technical Parameters	2
- Explosive Drawing	3
- Component List	3
- Structure and Principal.....	4-5
- Operation Procedure	5
- Process of Operation	6
- Maintenance	6
- Technical Parameter	7
- Memo (Memo)	8

OVERVIEW

- Model DZ400series vacuum package works in a brand-new way that is make the inside of the bag vacuum and then seals it at once and just because of the high vacuum , extremely less air is left in the bag , resulting in restraining the propagation of bacterium etc. Microbe , avliding the goods teing mildew and rotten by oxidation and at the same time , so me spongy goods can be made reduced in the volume after being vacuum packed and thus become easy to transport and store.

PURPOSE

- This package uses compound film bags to do vacuum hot-sealing packing for various foods , medicines , native product , aquatic products chemical materials , hard wares and electronics components in the state of solid , powe , paste or liquid , which can effectively prevent the packed goods from being totten and gone bad caused by the oxidation of gresase goods or the propagation of the bacterium fond of oxygen , keep the quality , freshness , taste , color for an extended storage and make it easy to transport and export the packed goods.

PROPERTY FEATURE

- For the package with a single-chamber , the process of packing is shown in a very clear way with the organic glass cover equipped.

- With the two vacuum chamber work in turn to heave the packing and sealing well linked up wiyh the preparations , the efficiency is greatly enhanced. Both upper and lower work chambers are made of stainless steel , reasonable in the structurd , good gas tightness , beautiful , durable and in line with the requirement of food sanitation and anti-rottonness.

- This package ais set with the function of combining vacuum , sealing , peinting in one process and for different packing materials and requirements , with adjustable devices for the vacuum , hot-sealing temperature and times so as for the users to get optimum selection and adjustment for an optimun effect of packing. The printing device with a convenient letter-change and clear printing is available per the desire of the users, with which , users may print on the sealing at the same time for sealing the valid period, date of ex-factory , code of ex-factory etc. To meet with the provision of the national food label law. The package features advanced design , full function , stable and reliable performance , good sealing strength , strong packing capacity , convenient operation and service , high economic benefit etc. and is the idealer machinery for the vacuum package.

MAJOR TECHNICAL PARAMETERS


- Lowest absolute pressure intensity in the vacuum chamber 1KPa.
- Volume of vacuum chamber (L X W X H):-
 - 1) 440 x 420 x 75mm (400T and 400 single-chamber)
 - 2) 500 x 450 x 118mm (400 dual-chamber)

- Packing speed : 1-3 time/min
- Power supply : 3 phase 380V / 50Hz ,
: Single phase 220-240V / 50Hz

- Hot-sealing power : 0.8KW (400dual-chamber single-chamber)
- Motor Power : 0.75KW (400 single and dual chamber)
- Evacuation rate : 5.5L/Sf400 single and dual chamber
- External Dimension (L X W X H) :
 - 1) 560 X 500 X 460MM (400T)
 - 2) 1100 X 790 X 1000MM (400 dual chamber)
 - 3) 560 X 500 X 1050MM (400 Single chamber)

- Weight :
 - 1) 102kg (400T)
 - 2) 120kg (400 single chamber)
 - 3) 200kg (400 dual chamber)

EXPLOSIVE DRAWING (RAJAH TERPERINCI)


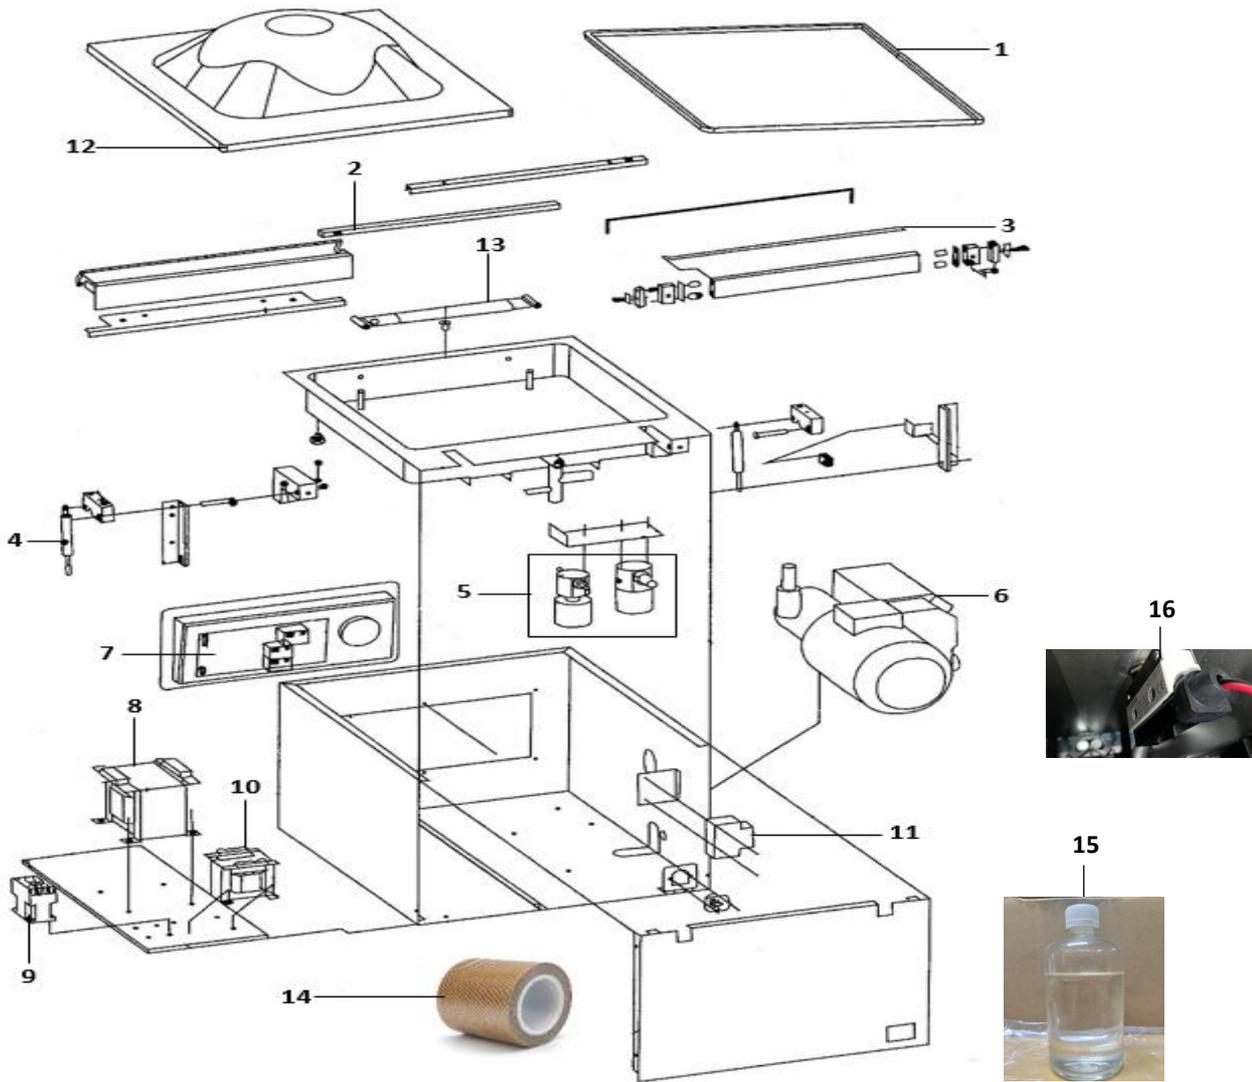



COMPONENTS LIST (SENARAI KOMPONEN)

No	Description	BOM Code
1	Airproof Rubber	IC-VCM-AP-RB
2	Heater Rubber - 11 x 166 x 410mm	IC-VCM-HT-RB
3	Element Cushion	IC-VCM-E-CH
4	Air Spring	IC-VCM-A-SPR
5	Electromagnetic Valve $\varnothing 15$ (2 x 2) + $\varnothing 6$ (2 x 3) - Set	IC-VCM-EMV
6	Vacuum Pump - XD-0020	IC-VCM-V-PUMP
7	Control Panel	IC-VCM-CPC
8	Element Transformer	IC-VCM-E-TRANS
9	Contactator	IC-VCM-CTC
10	Isolation Control Transformer	IC-VCM-C-TRANS
11	Power Switch - DZ47-63, C20	IC-VCM-P-SW
12	Plastic Top Cover	IC-VCM-COVER
13	Heater Strip	IC-VCM-HEATER
14	Tape - 10 Meter / Roll	IC-VCM-TAPE
15	Vacuum Oil	IC-VCM-V-OIL
16	Limit Switch AZ-7310	IC-VCM-L-SW

STRUCTURE AND PRINCIPLE

- This package consists of the upper and lower vacuum chambers , body , electrics , vacuum system five parts , the upper chambers top is set with a group of hot-pressing sealing device and the lower one is set with the hot-pressing sealing device and the lower one is set with the hot-pressing sealing device , The heating element is the Ni-cr tape and mounted on the bake lite hot-pressing stand , which is absolutely insulated from the vacuum chamber and closely fitted on the gasbag, which before hot sealing , is in a low vacuum state and during hot-sealing is made interlinked with air through the hot-sealing electromagnetic valve YV and enlarged with its volume so as to have the heating head (Ni-cr tape) pressing down ward on the sealing while heating temperature and time are adjustable .
- The power supply of the package : AC 100V , 60Hz , three phase four-wire with the neutral input ,
- Motor of the vacuum pump : AC 220V , 2x0.75KW,2800r.p.m
- The heating system is of Voltage-regulation type i.e.The primary of the hot-sealing transformer is 220V , the secondary has three shifts of 28V , 32V and 36V adjustable with the switch on the panel.The hot sealing temperature is changed by means of the voltage the secondary while the hot sealing time is adjusted by the digital display time relay on the panel.
- The vacuum system is consists of evacuation , hot sealing and deflation electromagnetic valves YV and used as the executive mechanism.
- Evacuation from the vacuum chamber starts once the vacuum pump is enabled and it will stop when the intended vacuum peaches , the whole control procedure turns into next one then. This packager uses a single-stage rotary-sheet type vacuum pump (see the manual for the details of the technical property of the pump)
- See fig. 2,3,4 for the structure and panel , the electric principle and the vacuum system principle , respectively.

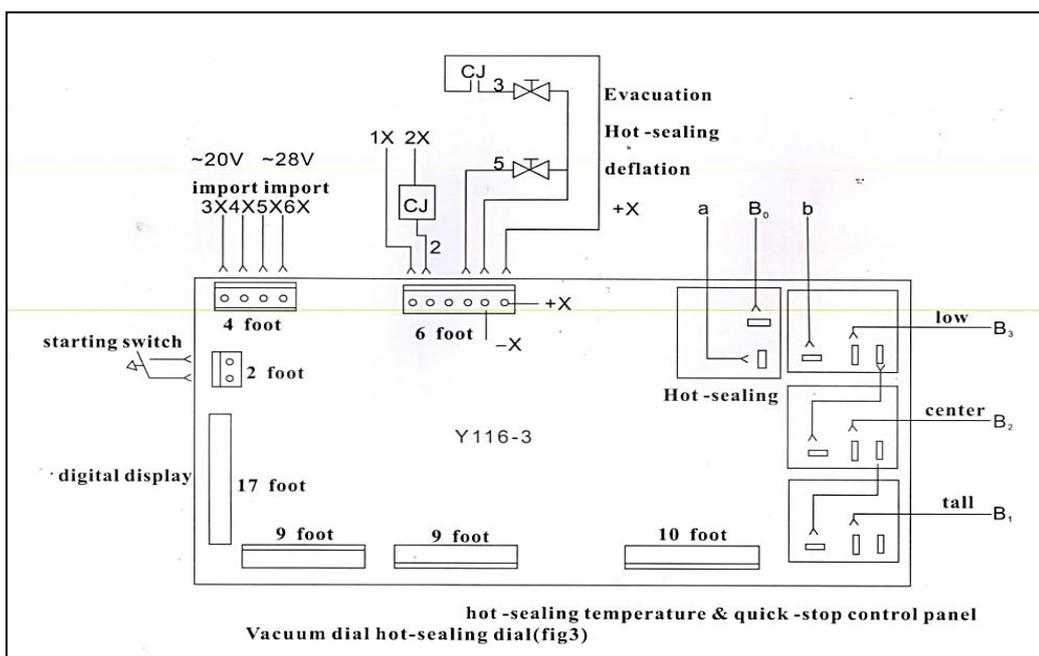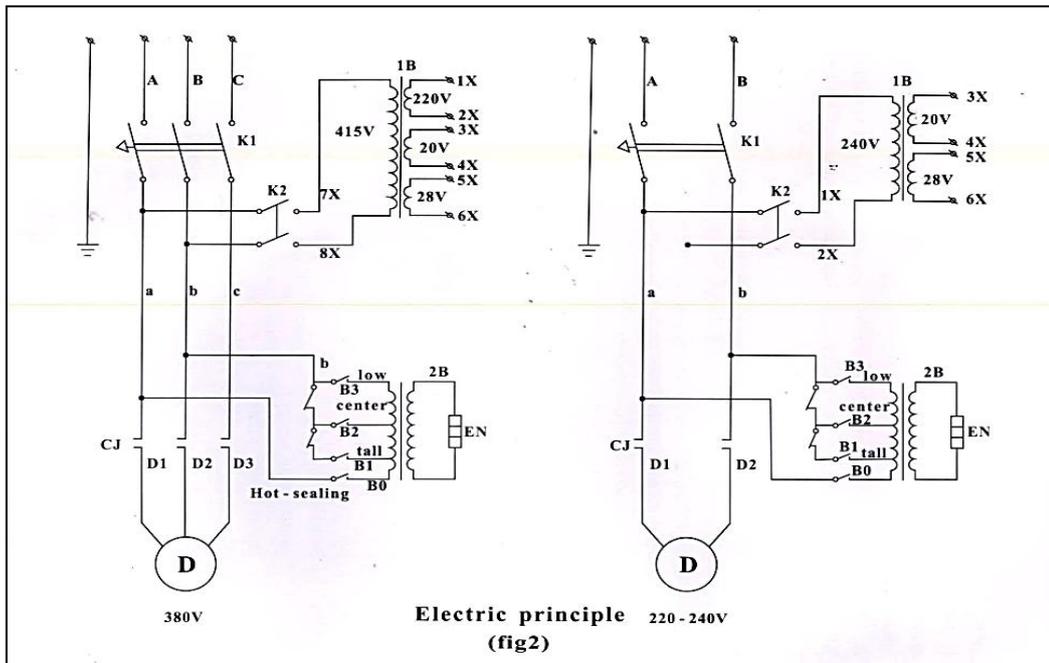

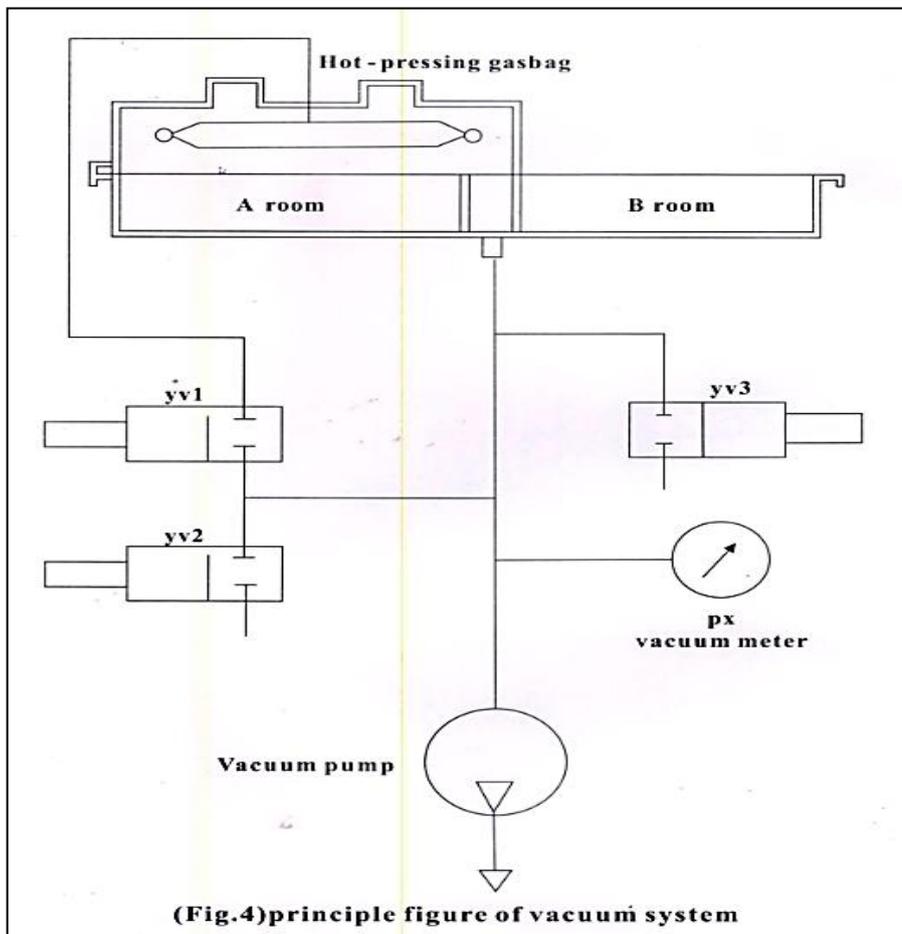

OPERATION PROCEDURE

- 1) Turn on the power : Enable the power switch , the quick -stop indicator lights.Set the evacuation & hot-sealing dial to relative time.
- 2) Press down the cover , the evacuation (Vacuum) indicator lights , the vacuum pump start evacuation and the cover is automatically attracted. Vacuum can be adjusted by means of the vacuum time dial per the packing requirement and be adjustment should be done from low to high with a small amplitude.
- 3) When the set time (the desirde vacuum) reachse , evacuation ends and the evacuation indicator goes out.Set the power switch to the vacuum position, the vacuum packing bedins and the air -filling indicator goes out.
- 4) Along with the evacuation indicator goes out , the hot sealing indicator lights to enter the sealing procedure. The adjustable knobs for both hot sealing time and temperature on the panel are equipped with for the materials of different thickness. To adjust the knobs use a small amplitude of rotation so as to prevent the hot-sealing temperature form being raised in a sudden. Thus burning the hot-sealing fittings.
- 5) When the set time for hot-sealing reaches.The hot-sealing indicator goes out and the hot-sealing ends , then air goes into the vacuum chamber via the electrognetic valve till the cover lifted automatically , the process of vacuum , air-filling and packing ends and next such a process is ready.

REGULATION AND OPERATION

- When packed,check with the list of packing if the accessories are full , if the screws on every location are loose and if the upper vacuum chamber flesible to move left and right.
- Pronerly lubricate every moving part , oil hole and oil nozzle and in according with the manual for the vacuum pump , properly inject engine oil into it and observe the oil level at running when injecting No.6 engine oil via the oiling inlet till the 3/4 height of the oil window, which should not be lower than 1/4 height of the oil window and max. Oil quantity should not exceed 3/4 height of the oil window.

REGULATION

- 1) Regulation of the vacuum in the vacuum chamber
 - Optimize the time of evacuation per the need of the packed goods to get an appropriate vacuum the longer the time for evacuation the higher the vacuum to be gained.
- 2) Regulation of hot-sealing temperature and time
 - Optimize the hot-sealing temperature (3-shift adjustable) and time (0-9.9s) per the different bag material and packed goods to get an optimun strength of sealing. To regulate generally do it from low to high till the desired appearance and strength of sealing.

PROCESS OF OPERATION

- Place the goods to be packed in the bag (plastic compound or Al-foil compound bag) and put the bag into one of the lower vacuum chambers , lift the bag-pressing stand.
- Turn on the power switch , the power indicator lights and then cover the lower vacuum chamber with the upper one for automatic sealing as to enhance the efficiency of packing.
- Set the power switch to "off" position and cut off the main power when the whole procedure of packing ends.

MAINTENANCE

- Before operation , carefully read the manual to get familiar with the way of regulation and operation.
- Periodically maintain and lubricate the vacuum pump according to its manual and pay much attention not let it reversedly run in order to prevent it against being damaged and the oil from reversedly spraying inside of it till the vacuum system.
- Often check if the erath line well contacted to make sure of safety.
- Often check if there is any foreign matter on the sealing dyeing cloth (PTFE) an if it is flat to make sure of the sealing strength.
- Turn off the power on time in case of a failure and if necessary, press the quick-stop button , then lift the cover after deflation and turn off the voltage to examine the cause and troubleshoot.

COMMON TROUBLES AND TROUBLESHOOTING

1) No Vocuum formed or low vacuum

- Reversed running of the vacuum pump . Check if its direction of running in line with the arrow of the pump motor and , if not , adjust the phase.
- When newly used, the sealing ring of the upper chamber may not be well fitted with the plane of the lower one , so slight pressure is required to be applied on the cover to make both completely mated.
- The position switch is not in place , Adjust the position of the limiting sheet or it.
- The deflation valve is not closed tightly and produces leakage.Check its vale core (rubber) if it is worn out, polluted or its center displaced.
- Check if there is leakage of looseness with every part of the pipeline.

2) Bad hot-sealing quality


- Check if the opening of the packing bag is clean and take care not to let it polluted.
- Check if the Ni-cr tape works properly , if there is short-circuit or circuit breaking.

3) Failure of the master

- The master board inside of the package should be kept clean , dry and no metal foreign matter on its surface in order not make its interior short-circuited or the procedure confused.
- No vacuum formed or not hot sealing done or jump action produced.Which is due to being not well plugged of the relative dial switch's feet or the dial being damaged.
- Lack of strodes on display on display with the digital display board or no display for action indication.Which is caused by the looseness or being not well plugged of the board feet or partial damage of the board.
- Some shift of the high , middle and low shifts for hot sealing doesn't work the feet of the high, middle and low 4133 relay relative to the middle phase become loose or the relay is damaged.

MODEL DZ400 COMPUTER VACUUM PADKAGER'S CONTROLLER OPERATION INTRODUCTION

Keyswitch introduction.

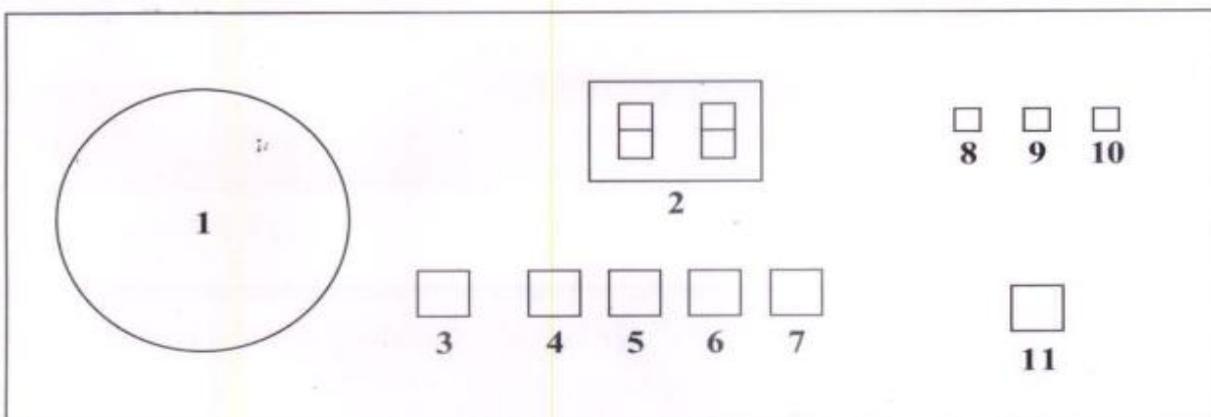

(Fig5)

- Vacuum watch
- Indicator of time and state Display "-" means await orders , display "□ □" means Air-deflation state and display figure means Air-extraction of thermal-sealing state.
- Urgent stop. In any state , touch this keystoke , the machine will return to await order state.
- The time of Air-extraction enactment , in the await order state , press this keystoke one time , The number of ten sec wink : press two times, the number of sec wink , and press three times , it return to await order state.
- The time of Thermal-sealing enactment , in the await order state , press this keystoke one time, The number of sec , wink press two times , the number of decimal fraction wink , and press three times , it return to await order state.
- Addition keystoke_in the Air-extraction or Thermal-sealing state,press this keystoke, The number of wink add one.
- Reduce keystoke . In the Air-extraction or Thermal-sealing state , press this keystoke , The number of wink reduce one.
- Low temperature indicator
- Middle temperature indicator
- High temperature indicator
- The temperature of Thermal-sealing enactment.Press this keystoke can change the temperature of thermal-sealing.

TECHNICAL PARAMETERS.

- The scope of Air - Extraction time : 0sec~99sec. Error rate : <0.1%
- The scope of Thermal-sealing time : 0.0sec~9.9sec . Error rate : <0.1%
- Temperature enactment : High , middle , low-Temperature
- Constant temperature : Fixation 2sec
- Ddflation - air : Fixaction 2sec

USE EXPLAINS

1) Air-extraction time enactment:

- In the await order state, press the Air-extraction keystoke 4 , it display the Number of the sec .wink , then press keystoke again. Enactmenmt the Number of sec.

2) Thermal-sealing time enactment:

- In the await order state,press keystoke 5 , it display the number of former-enactment and the Number of see.wink, then press keystoke 6 or 7 , enactment the you need, press keystoke 5 again , encatment the numberor 0.1sec.

3) Thermal-sealing temperature enactment:

- Press keystoke 11 and keystock 6 , keystock 7 like (1)(2) com enactment the sealing temperature.

4) Working process :

- In the await order state,press the vacuum cover , it will automatic finish the complete process.
- a) Air-Extraction : The number-tube begin take count of time from 0 to enactment Number.
- b) Thermal-sealing : The number-tube begin take count of time from 0.0 to enactment Number.
- c) Constant temperature 2 sec
- d) Air-deflation 2 sec . Display "□□" , the cover will open automatic.
- e) Await order display "_"


5) Use the keystoke of urgent stop.

- In the working state, if there have something wrong or you need stop working, you may press the keystoke 3 , it will stop working at once and return to await order state.

TECHNICAL PARAMETERS.

- Regarding the manual carefully before operating to be familiar with the adjust and using method.
- Basing on the regulations , on the vacuum pump manual maintain and filling oil into the pump regularly and reverse the pump us not permitted to avoid damasing the pump and spurting the oil on the vacuum room.
- Checking the earth wire is working or not to keep the electricity safe.
- Checking the things on the teflon cloth on the sealing stang,it's flat or not to keep the strength of sealing.
- If there is something wrong with the machines, you must power the machine , essentially put the emergency stop button ,then open the cover after bleeding the air, finally power off the machine , checking it and repairing it.
- When there is something wrong with the electromagnetic valve at first, to unload the control panel , then unload the electromagllletic valve frame the vacuum room,finally take the electromagnetic valve and change it. (fig6)

REMARKS : Same electromagnetic valve

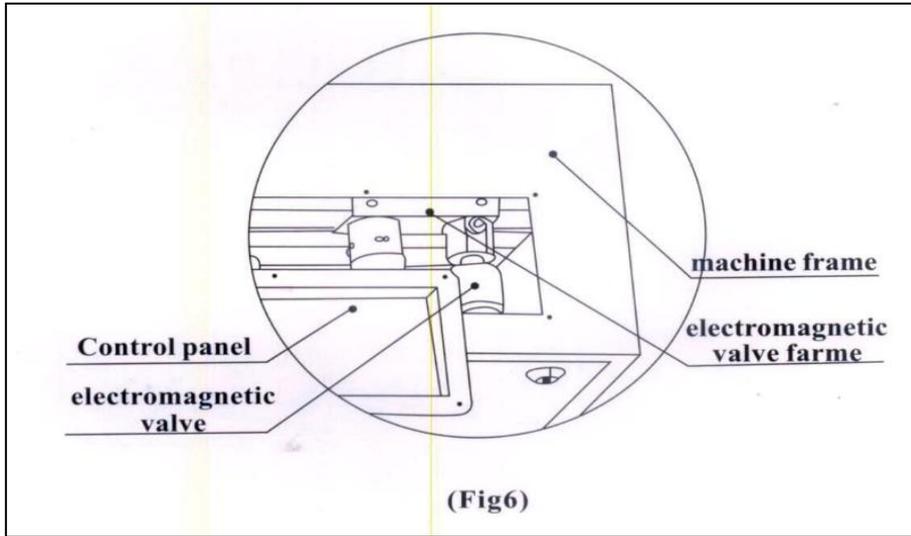

MEMO (MEMO)

Please fill in the following at the purchasing time for future service reference.
 (Sila isikan jadual yang berikut untuk rujukan perkhidmatan lepas jualan.)

Model Number (Nombor Model) :	
Purchasing Date (Tarikh Pembelian) :	
Dealer's Name (Nama Pengekar) :	
Address (Alamat) :	
Contact Number (Nombor Telefon) :	Home (Rumah) : Handphone (Telefon Bimbit) :
Comment (Komen) :	

The manufacturer reserves the right to change in design, equipment and technical features at any time. Accordingly, no claims based on data, illustration or descriptions in this operation manual will be admitted. English version is to be referred for any ambiguity.
 (Selaras dengan kemajuan teknikal, pengilang berhak untuk memperkenalkan perubahan dari segi rekabentuk, peralatan dan ciri-ciri teknikal. Selanjutnya, sebarang tuntutan gantirugi berdasarkan data, rajah atau huraian dalam buku panduan ini tidak akan dilayani. Salinan bahasa inggeris akan dirujukan untuk ayat yang keaburan makna.)

This operation manual is for usage guideline. The technical data details and usage instructions are given with our best knowledge of product and with good faith. It should not bind the sales agent or manufacturer to attendance in court or to appear in any enquiry before any government or statutory bodies.

(Buku panduan operasi ini adalah untuk garis panduan penggunaan. Butiran data teknikal dan arahan penggunaan adalah diberikan dengan fahaman kami yang terbaik terhadap produk dan dengan tujuan niat baik. Ejen jualan atau pengilang tidak seharusnya diikat untuk hadir di mahkamah atau mana-mana badan kerajaan atau berkanun.)